


串口通讯

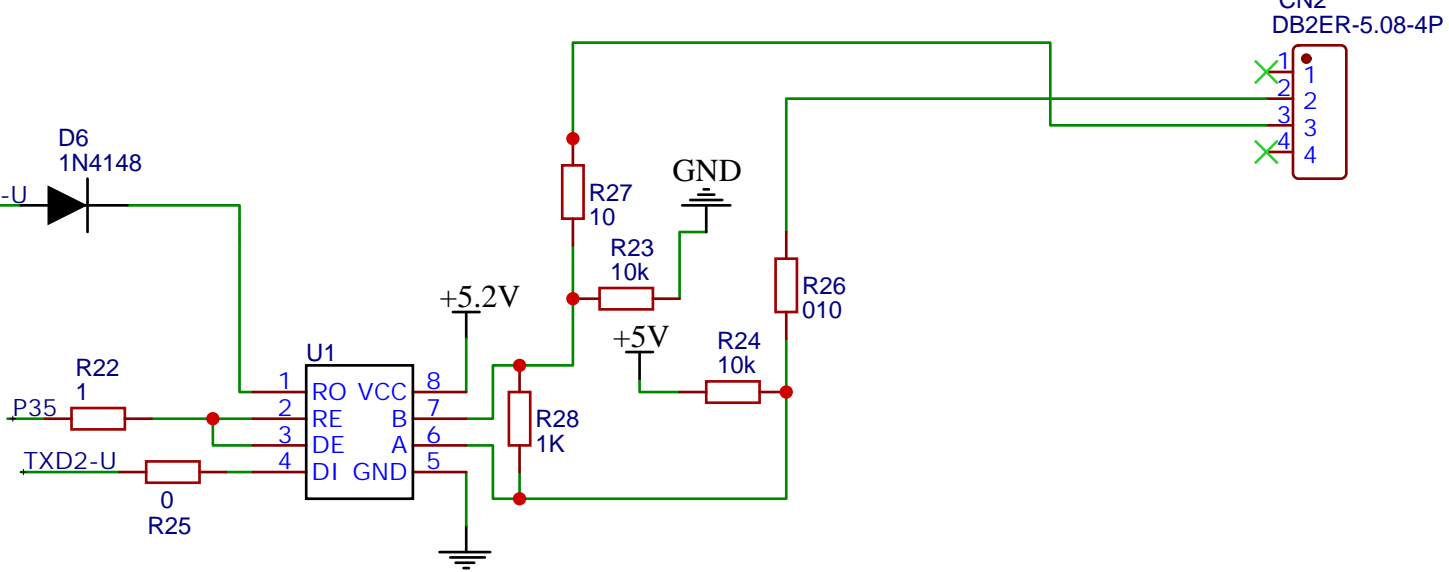

串口通讯

U1 485EN
U2 485EN
P35 485EN
拨码开关

P20
P21
P22
P23
P24
P25

P36 Power
P37 Run
P41 Error
P01 Err1
P02 Err2

P13 24V检测
P14 5V检测 (485电源)

