

- R3,R4用于电池电压采样，在关机状态下会消耗0.3mA左右的电流，如果介意则不要安装R3，R4，这不影响正常使用，只是在设置中无法显示电池电压
- R3,R4 for the voltage measuring of battary. It will drain current about 0.3mA. If you concerned about the drain current, please don't assemble the R3 and R4.
- They don't affect the normal function, you will not get the voltage infor of battary in settings only.

