


1. 安装 Keil

首先登录 Keil 官网，下载最新版的 C251 安装包，下载链接如下：


[Keil Product Downloads](#)

信息随便填写，点确定后进入下载页面进行下载。


双击下载的安装包开始安装，点击“Next”：

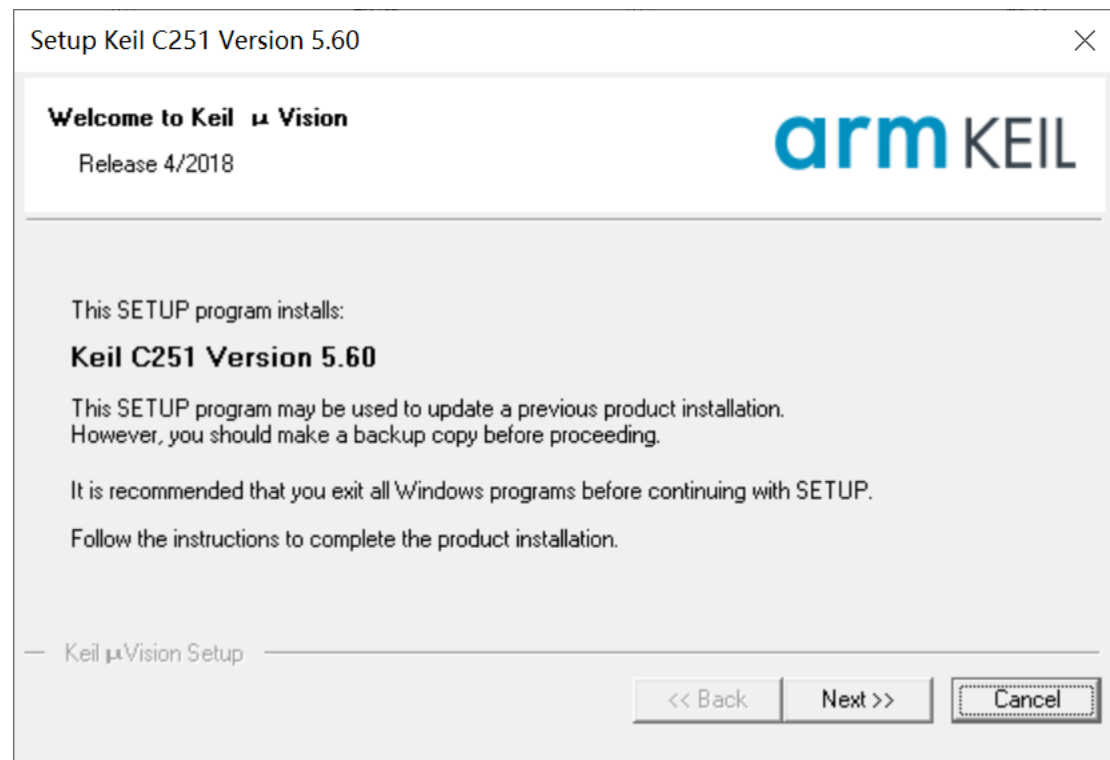

勾选“I agree to all the terms of the preceding License Agreement”,然后点击“Next”:

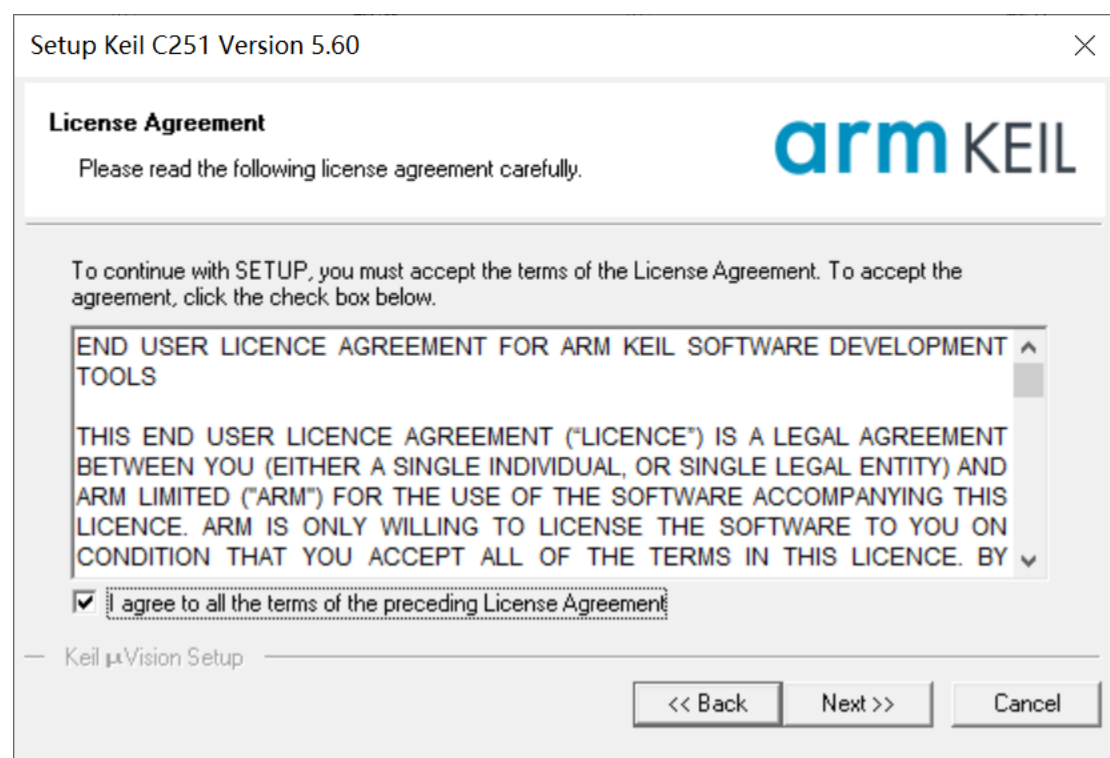

选择安装目录，然后点击“Next”：

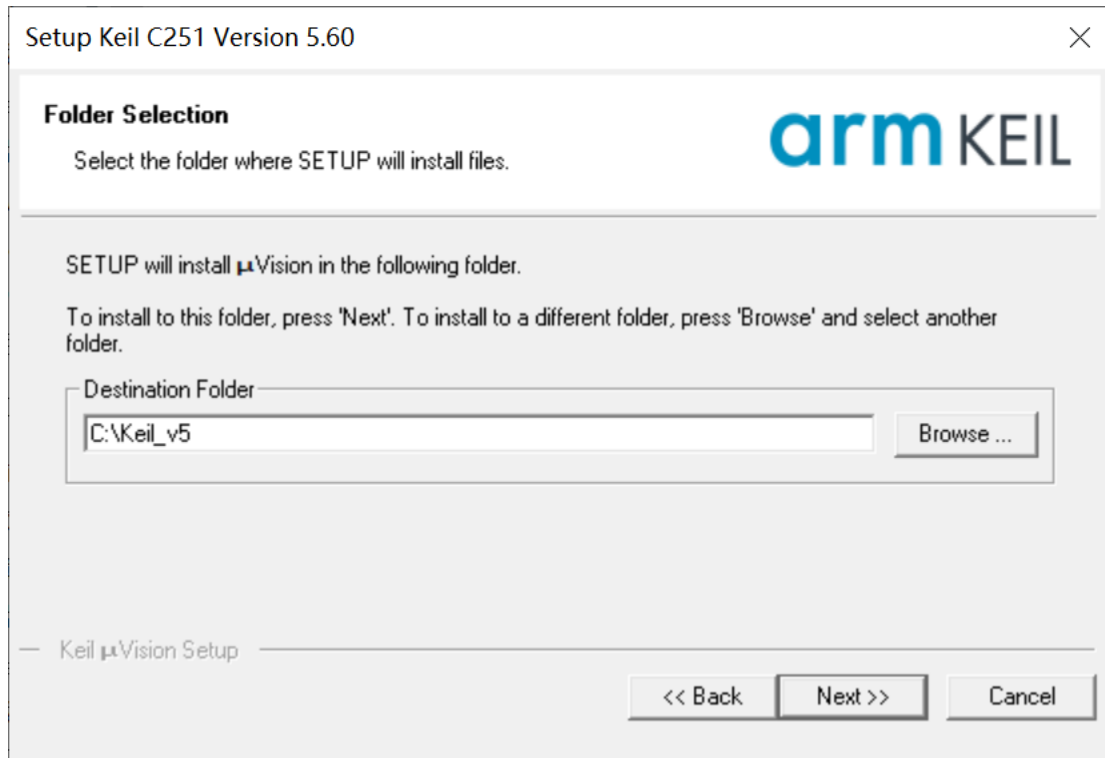

Setup Keil C251 Version 5.60

Folder Selection

Select the folder where SETUP will install files.

arm KEIL

SETUP will install μ Vision in the following folder.

To install to this folder, press 'Next'. To install to a different folder, press 'Browse' and select another folder.

Destination Folder


C:\Keil_v5

Browse ...

— Keil μ Vision Setup —

<< Back Next >> Cancel

填写个人信息，然后点击“Next”：

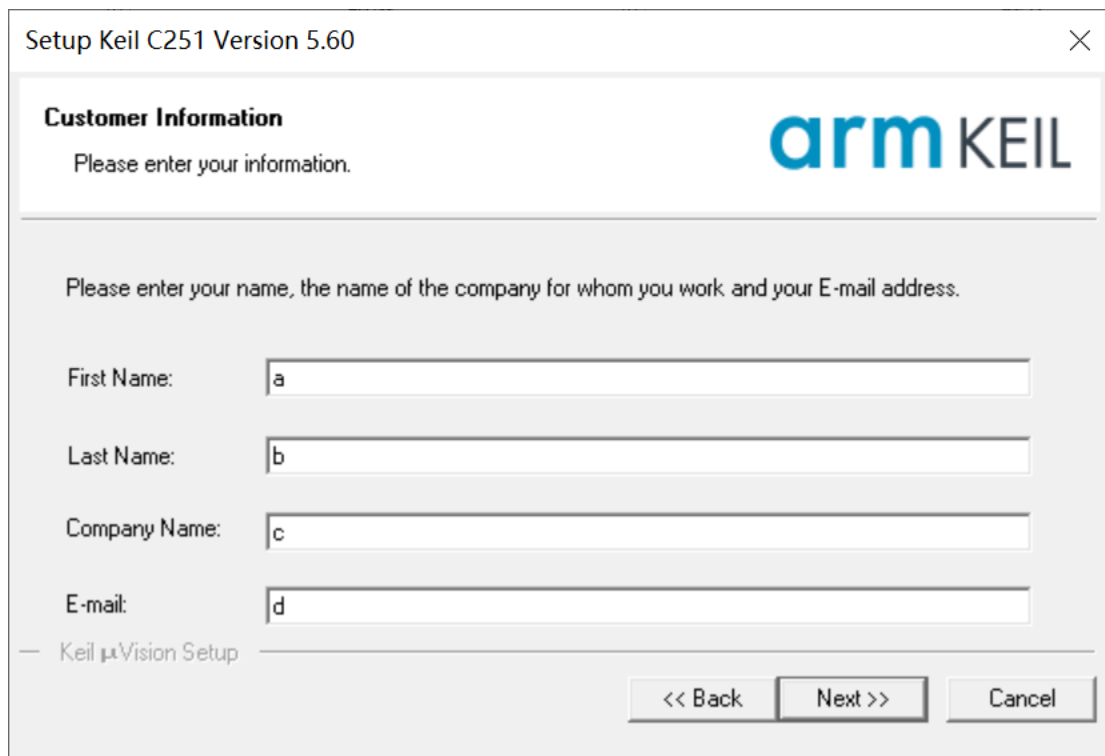

Setup Keil C251 Version 5.60

Customer Information

Please enter your information.

arm KEIL

Please enter your name, the name of the company for whom you work and your E-mail address.

First Name: a

Last Name: b


Company Name: c

E-mail: d

— Keil μ Vision Setup —


<< Back Next >> Cancel

安装完成，点击“Finish”结束。

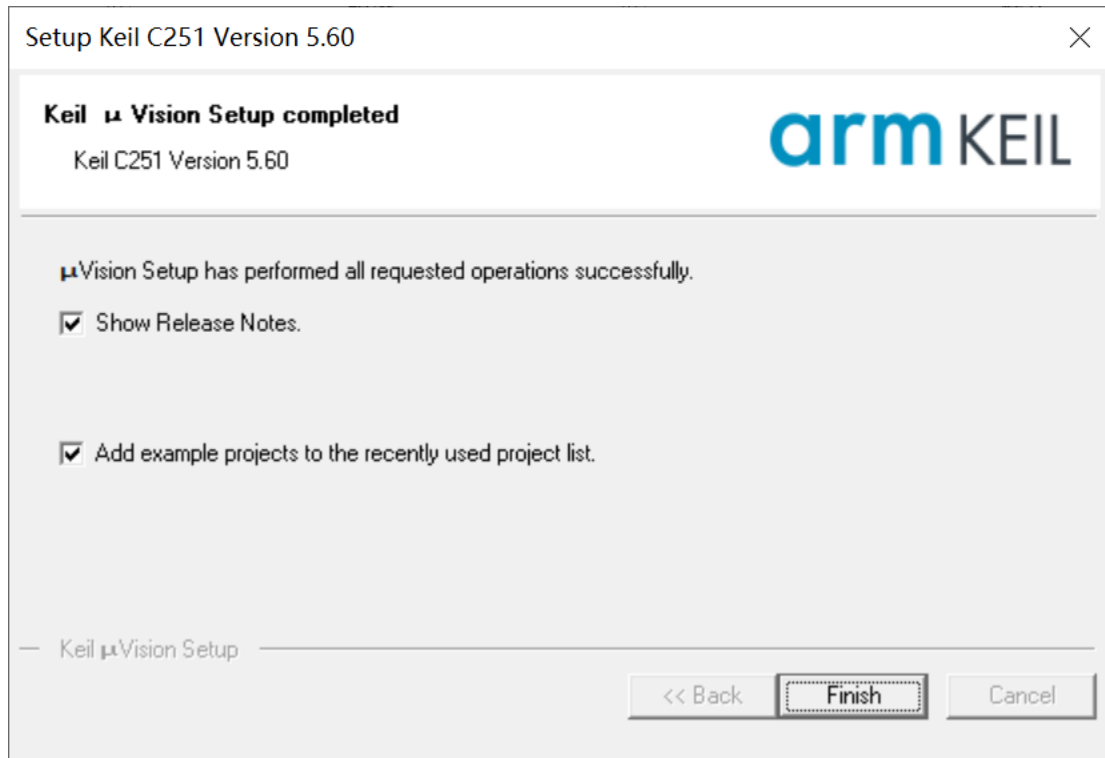


2. 注册 Keil

在桌面 Keil 快捷方式上面点击右键 -> 以管理员身份运行，打开 Keil 点击菜单栏 File -> License Management:

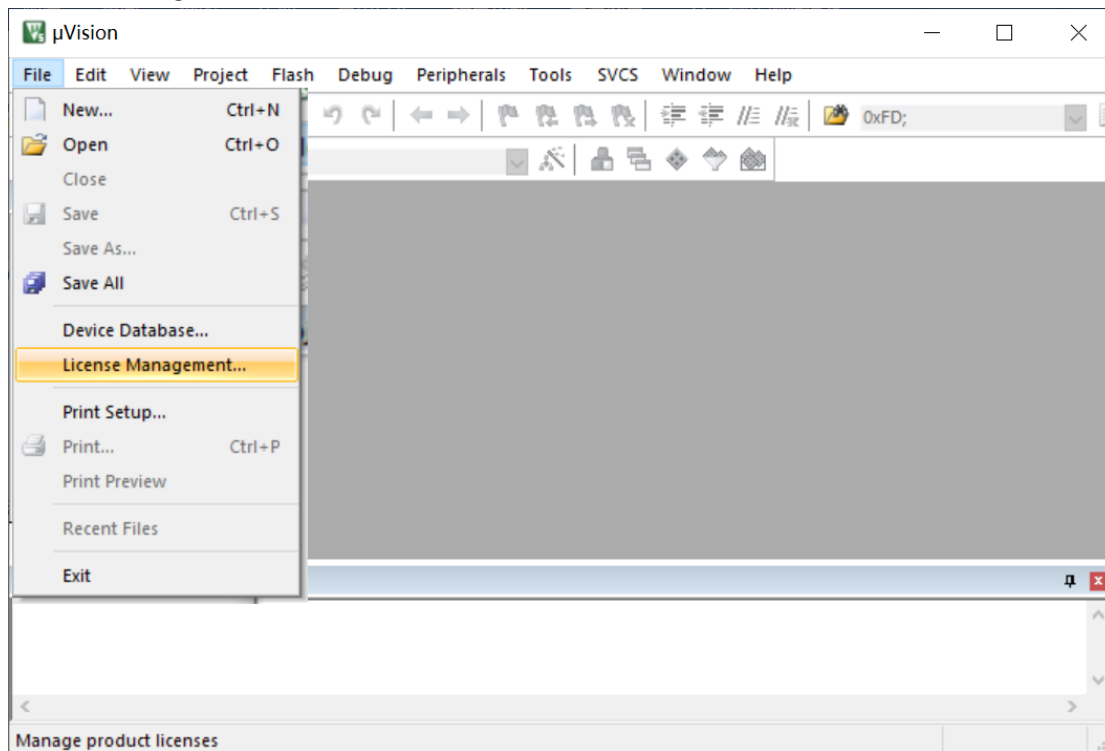

获取 CID 码:

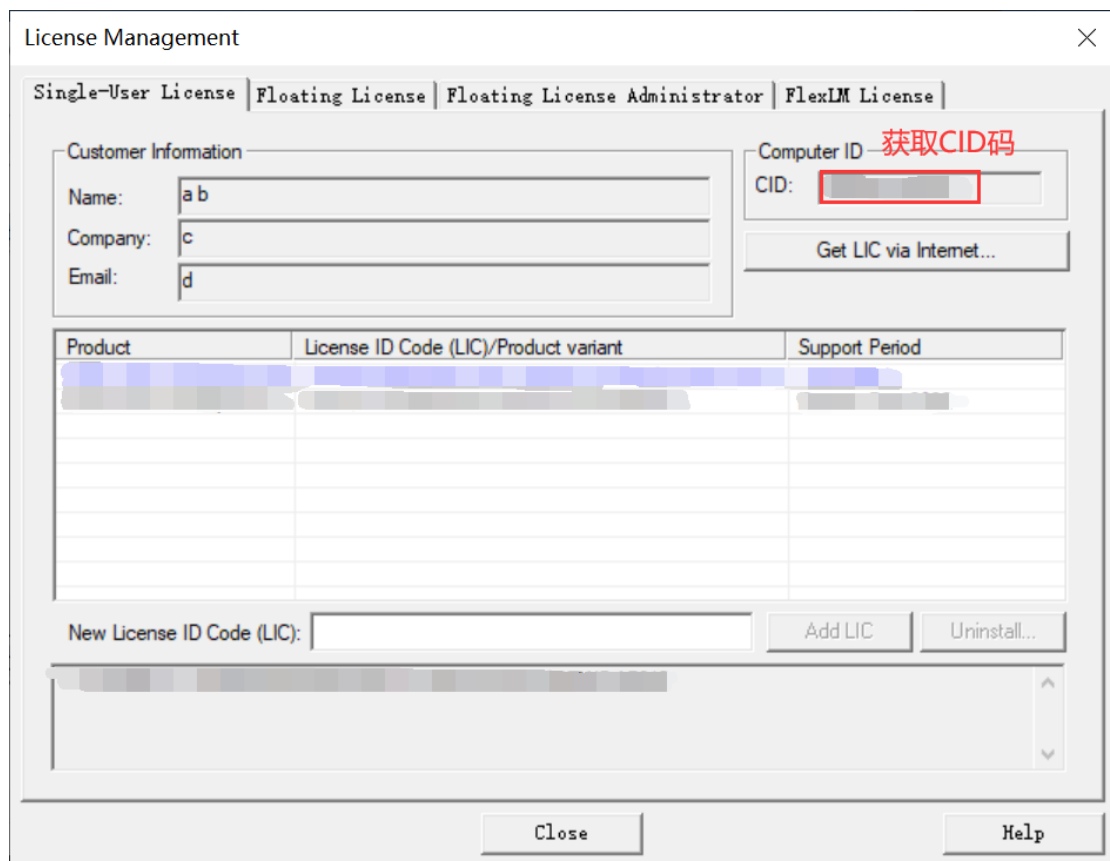

打开注册软件，输入 CID 码，目标选择 C251，点击生成按钮，将生成的序列号复制出来:



将生成的序列号复制到 LIC 框，并点击“Add LIC”按钮：

License Management

Single-User License | Floating License | Floating License Administrator | FlexLM License

Customer Information

Name: a b

Company: c

Email: d

Computer ID

CID:

Get LIC via Internet...

Product	License ID Code (LIC)/Product variant	Support Period

New License ID Code (LIC):

Add LIC

Uninstall...

1 输入序列号

2 点击添加按钮

Close

Help

完成注册:

License Management

Single-User License | Floating License | Floating License Administrator | FlexLM License

Customer Information

Name:

Company:

Email:

Computer ID

CID:

Get LIC via Internet...

Product	License ID Code (LIC)/Product variant	Support Period
PK251 Prof. Developers Kit	[redacted]	Expires: Dec 2032
PK51 Prof. Developers Kit	[redacted]	Expires: Dec 2032

New License ID Code (LIC):

Add LIC Uninstall...

*** LIC Added Sucessfully ***

Close Help